


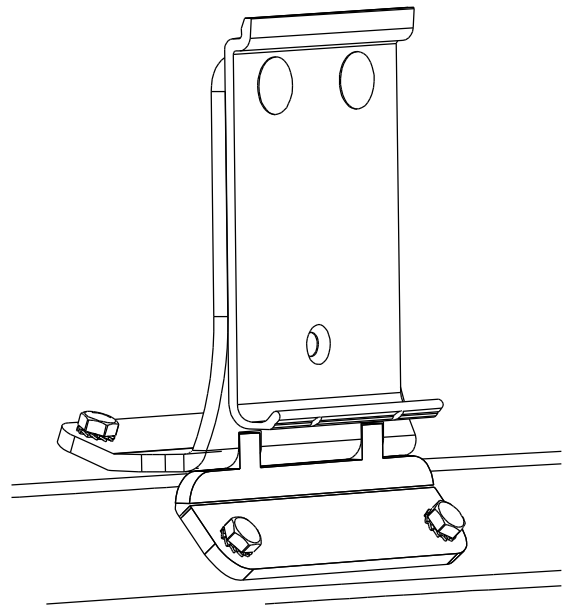
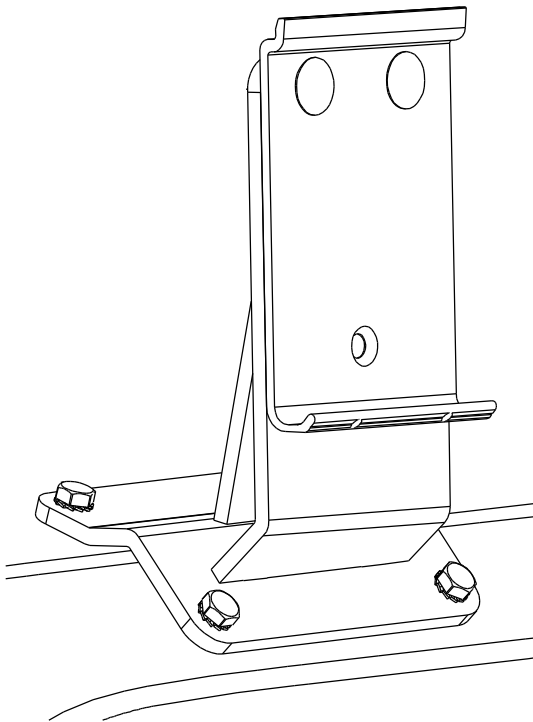


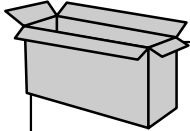

Ford Transit/Tourneo Custom adapter


➤ Instructions

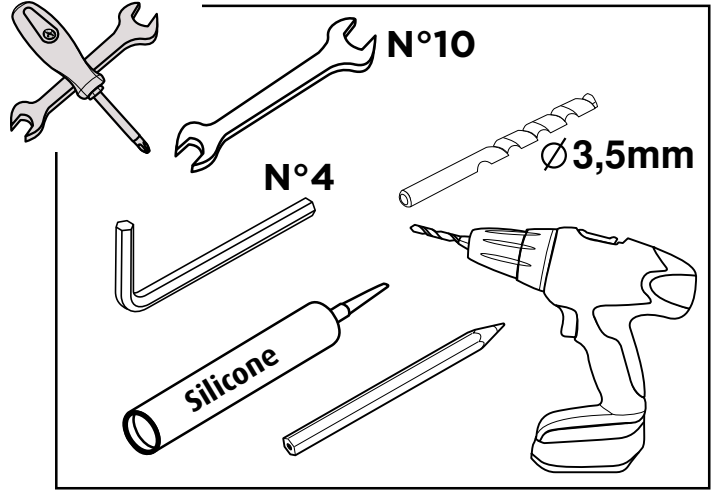

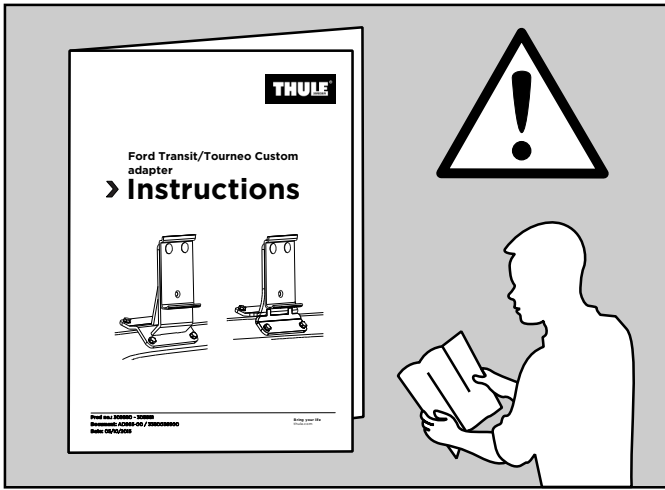


A

Rear

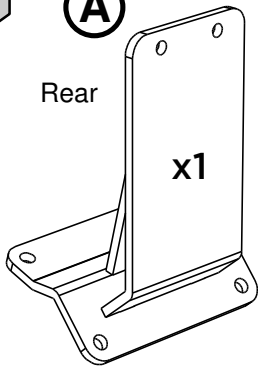

B


Front

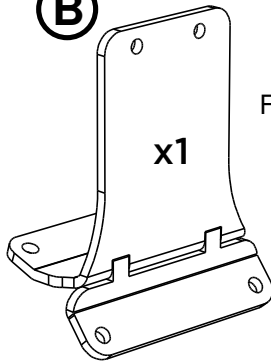


DIN 934 - A2
M6



Rapid nut M6



DIN 7380 - A2
M6 x 25 mm




DIN 603 - A2
M6 x 20 mm




DIN 6798
M6 - A2



Nut Cap M6



DIN 7504 - A2
4,2 x 16 mm

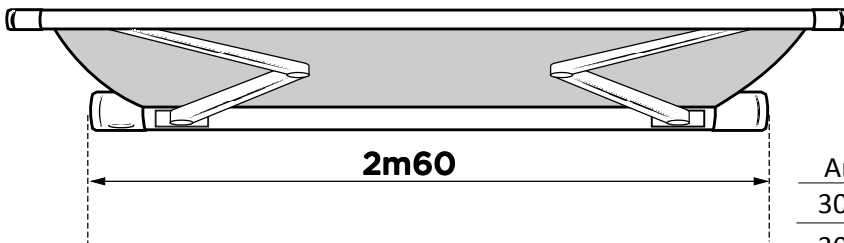

2m60

Art. nr.

Discription

309980


Ford Transit/Tourneo Custom RHD







309981

Ford Transit/Tourneo Custom LHD

+ - 280 mm

1933 mm

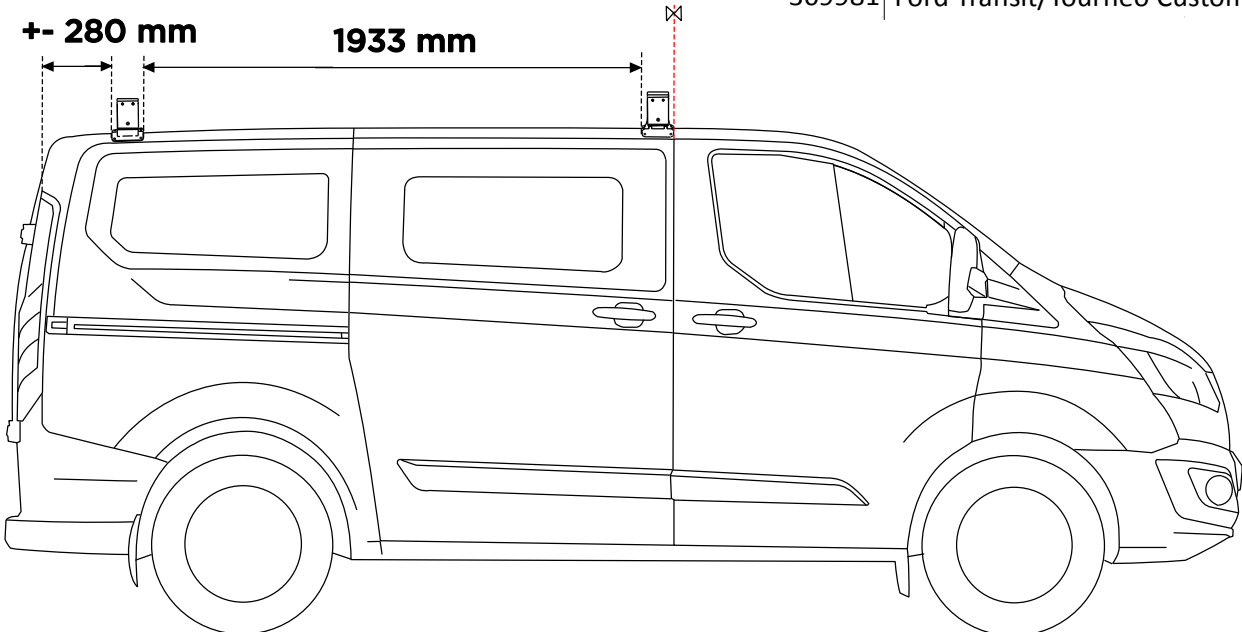

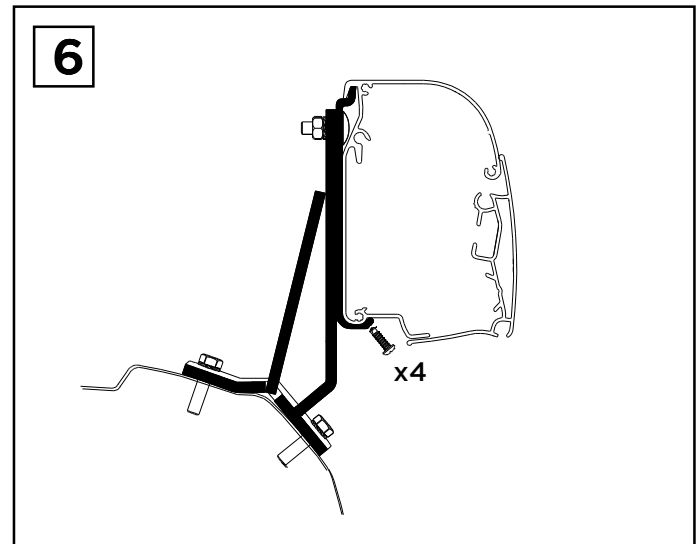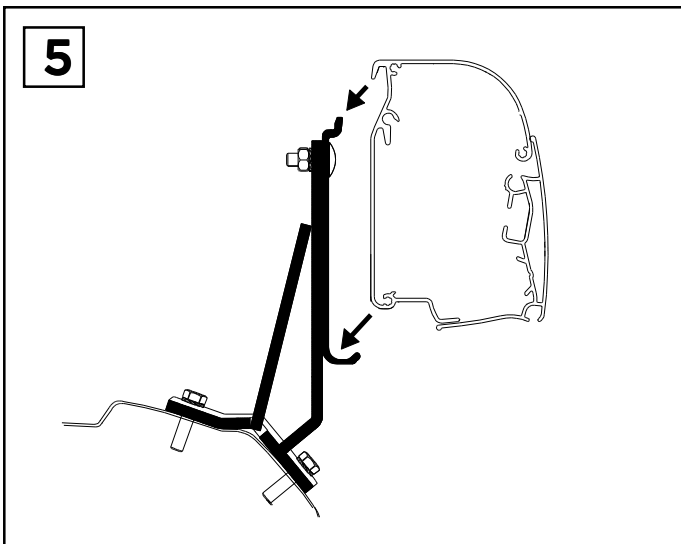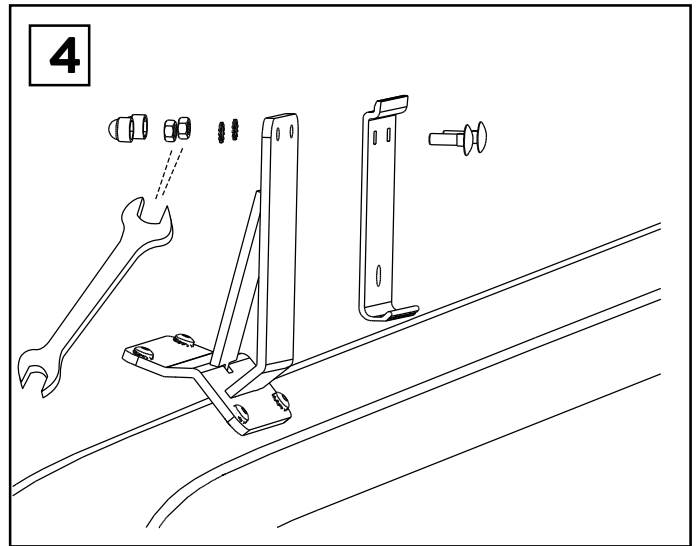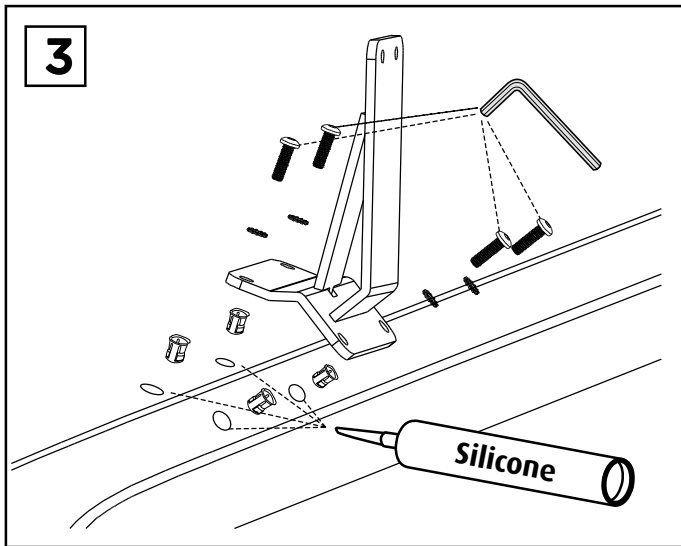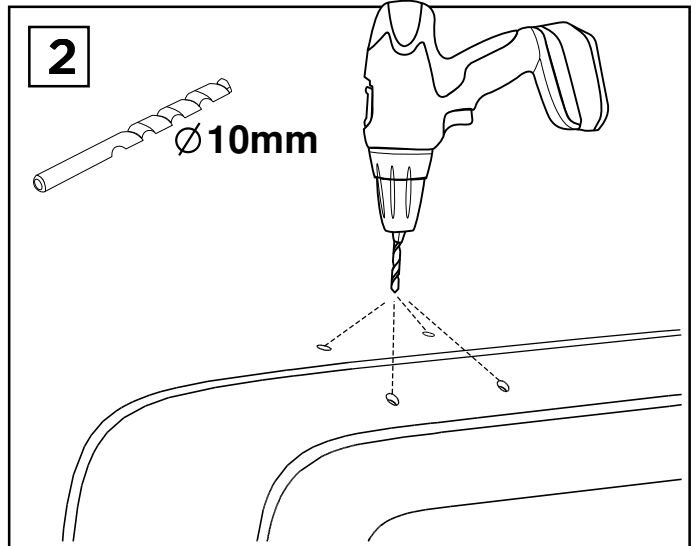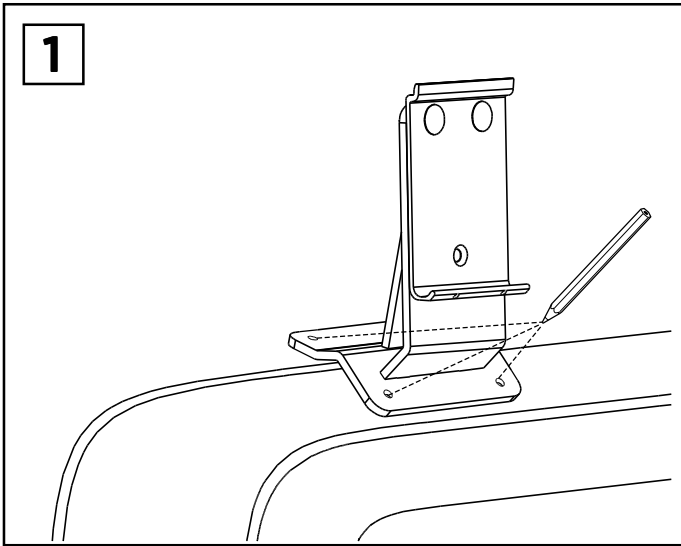

AD965-00

Thule NV, Kortrijkstraat 343 – BE 8930 Menen, BELGIUM

infoRV@thule.com

www.thule.com