

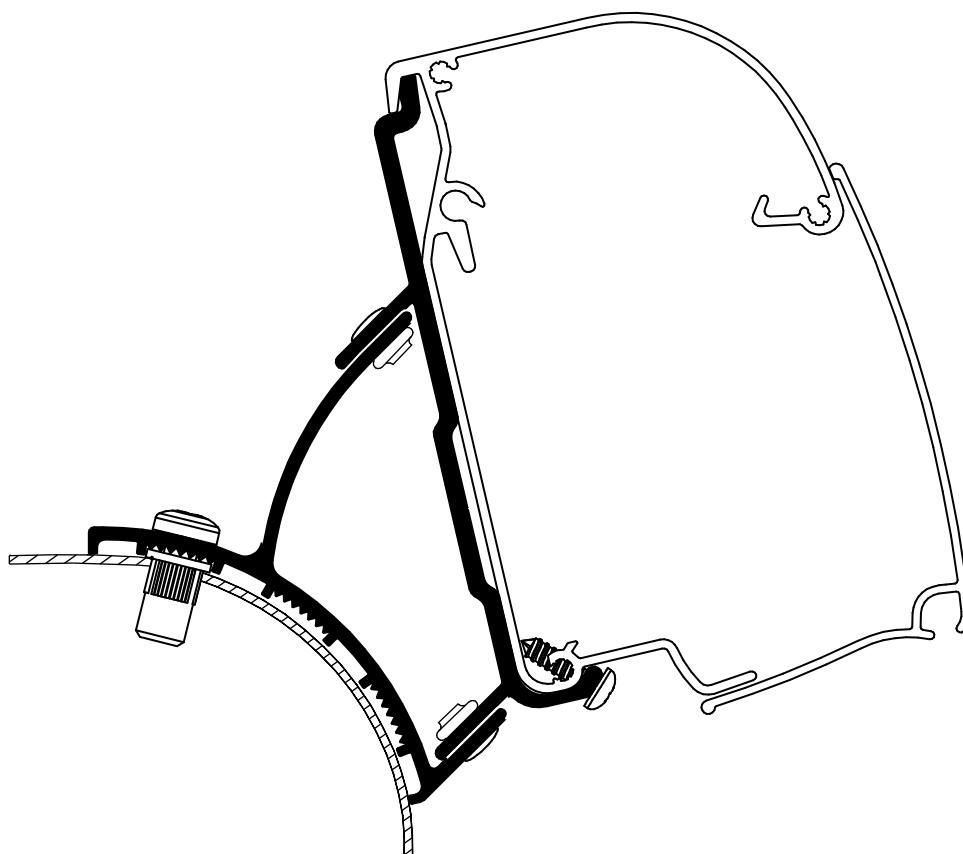




Adapter VW T5/T6 TO 4900

➤ Instructions

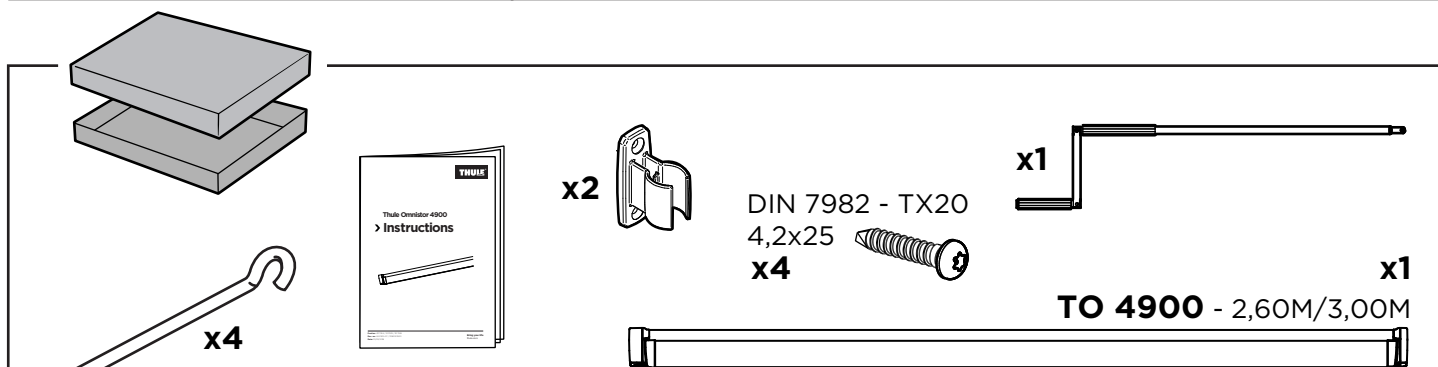


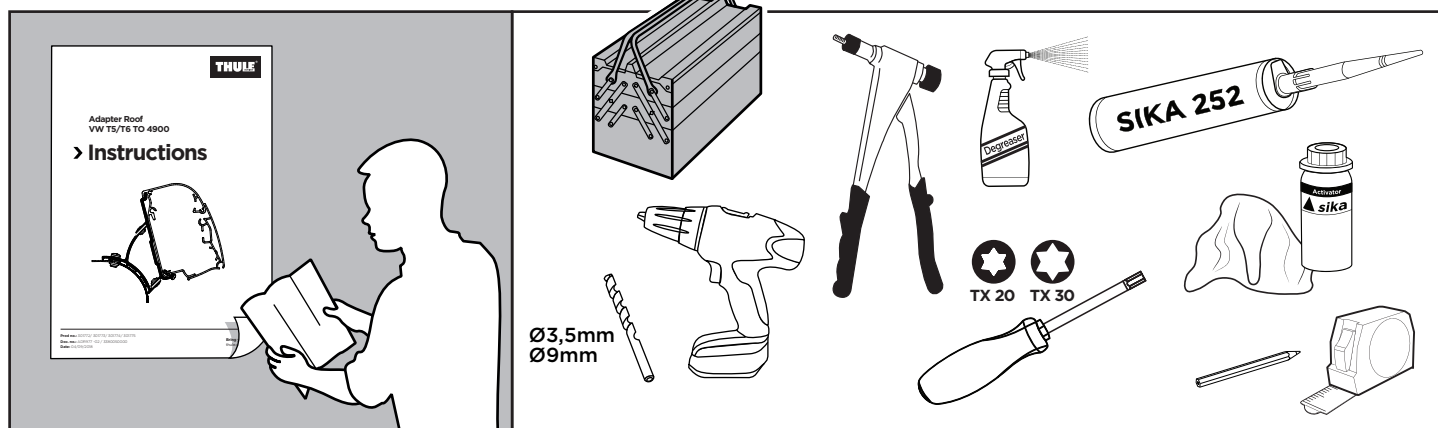


Art. Nr	Awning	EU/UK	Front	Back
301772	3,00M	LHD	ID 1	ID 2
301773	2,60M	LHD	ID 1	ID 2
301774	3,00M	RHD	ID 3	ID 4
301775	2,60M	RHD	ID 3	ID 4

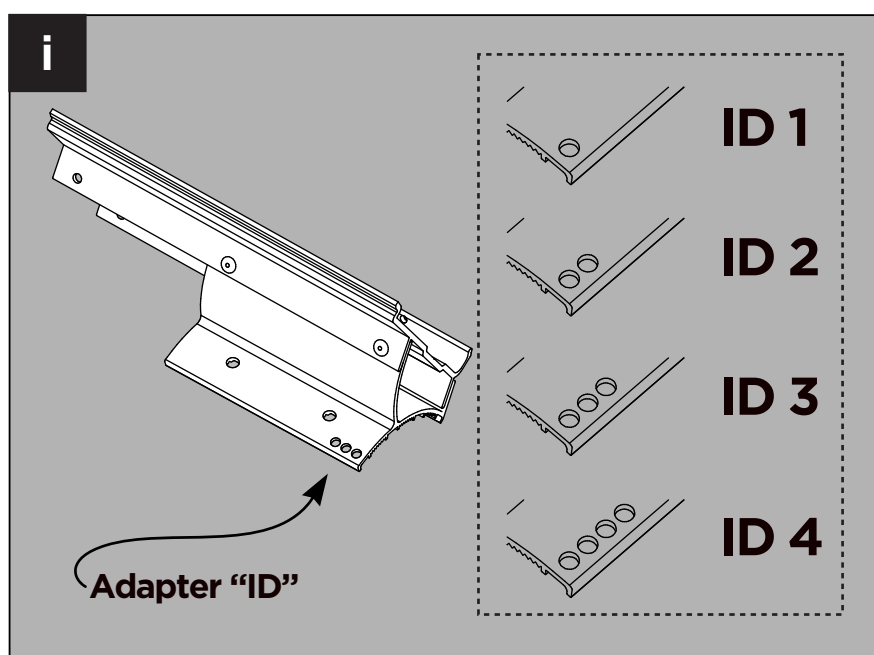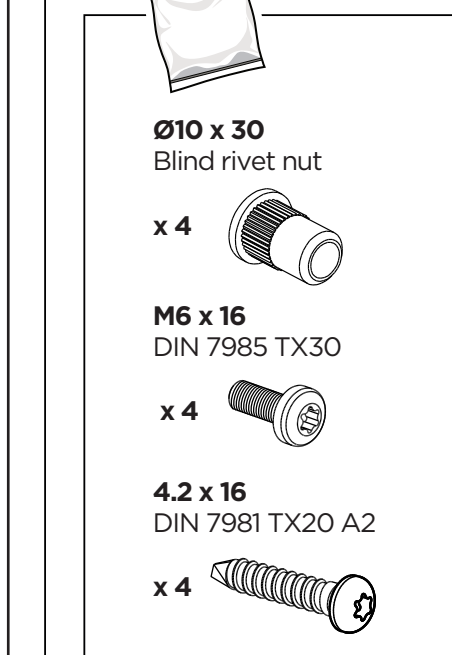


i

RIGHT HAND DRIVE (RHD) is **MIRROR** of LEFT HAND DRIVE (LHD)

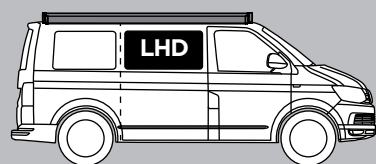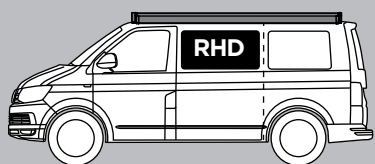

RHD BACK

RHD FRONT


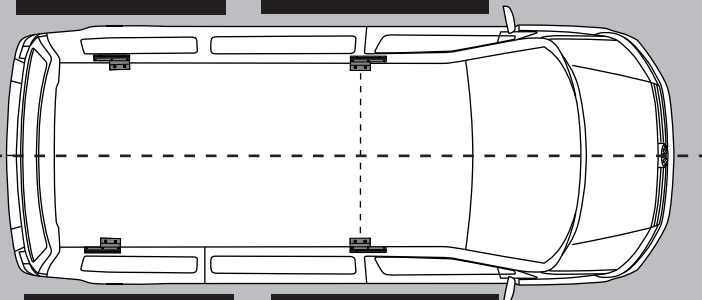


LHD BACK



LHD FRONT

! IN THIS MANUAL **LEFT HAND DRIVE (LHD)** IS SHOWN BY **DEFAULT**



L1H1 LHD

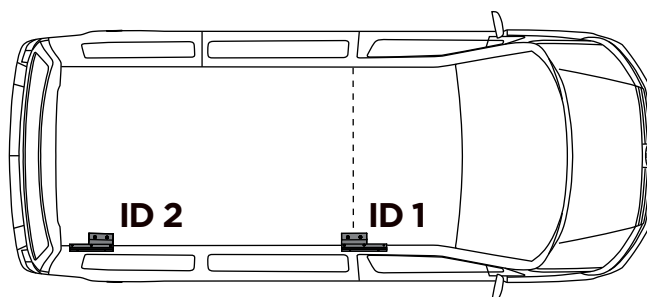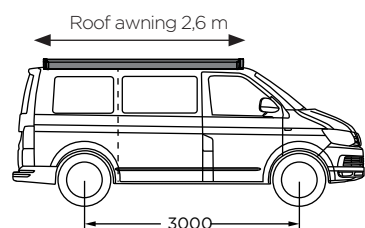



L2H1 LHD

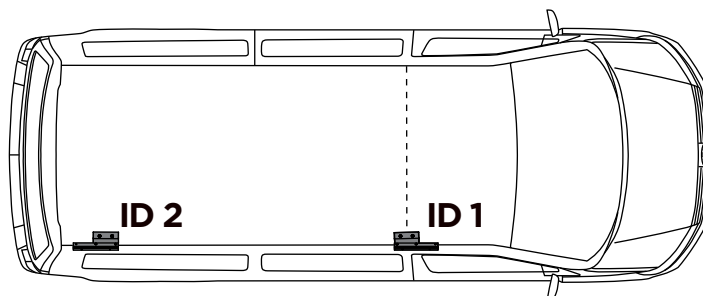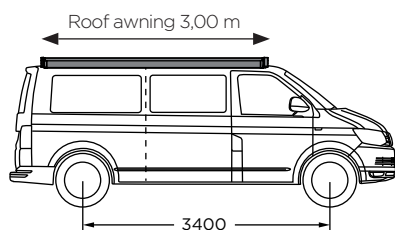

L1H1 RHD

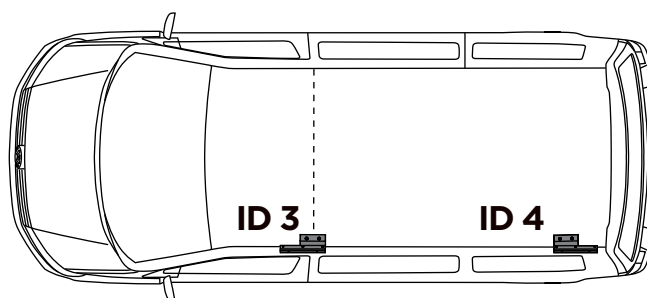
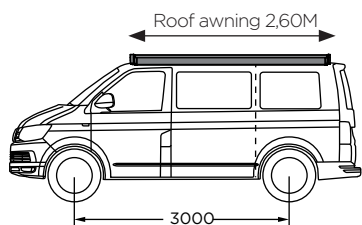


L2H1 RHD

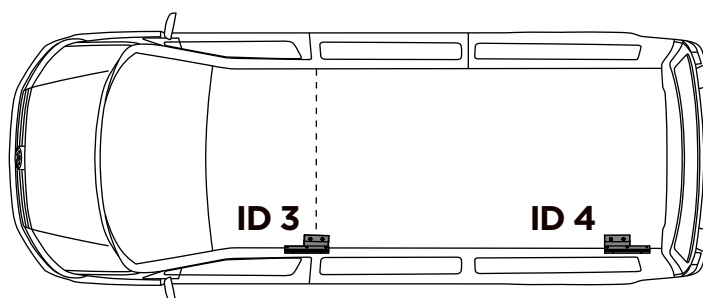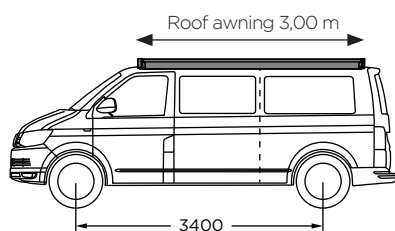


1

⚠ RHD IS MIRROR OF LHD

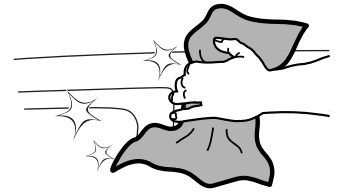
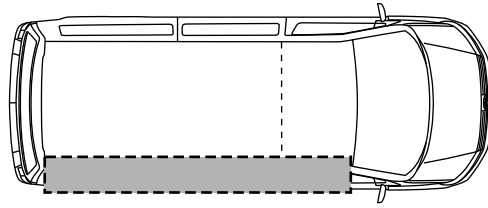


2


2M60

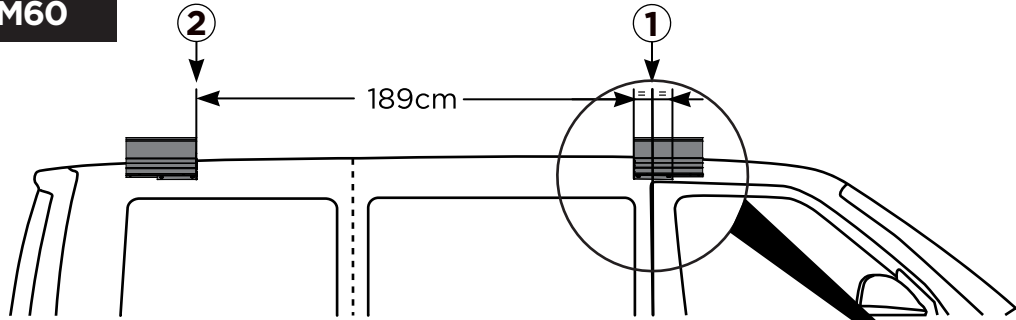

3M00

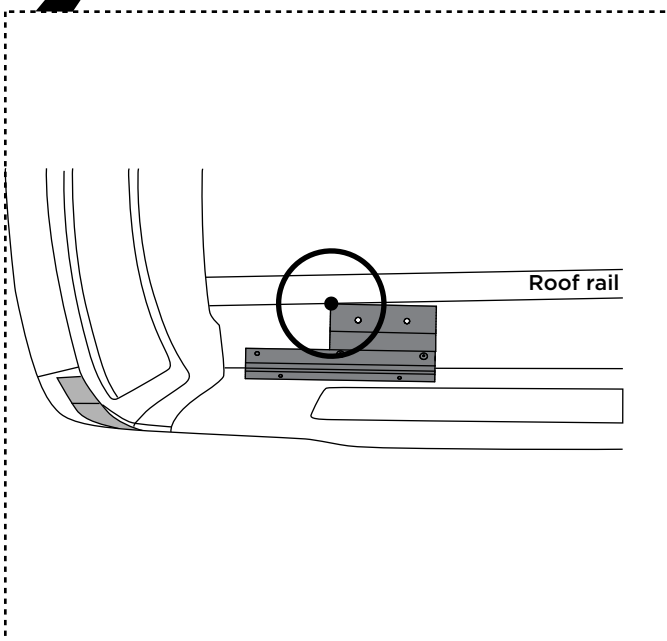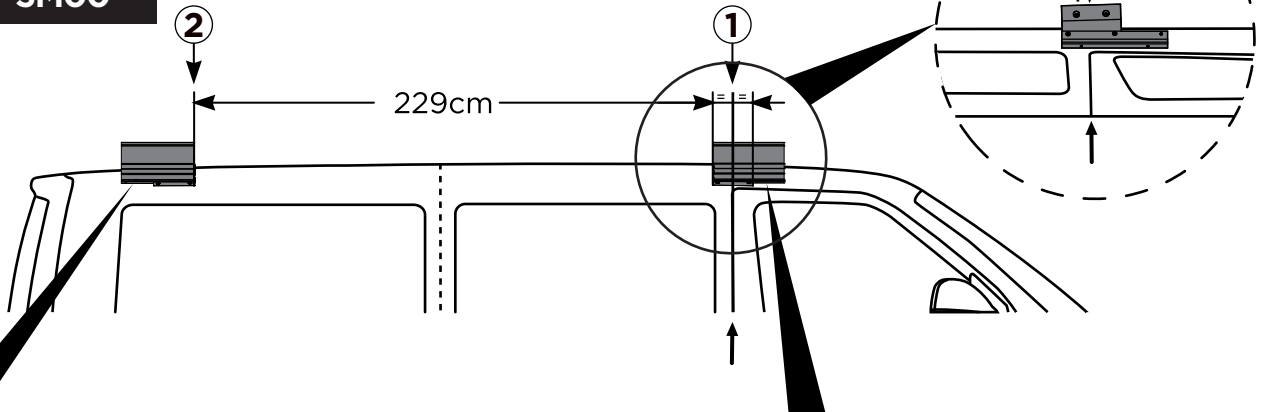

Roof rail

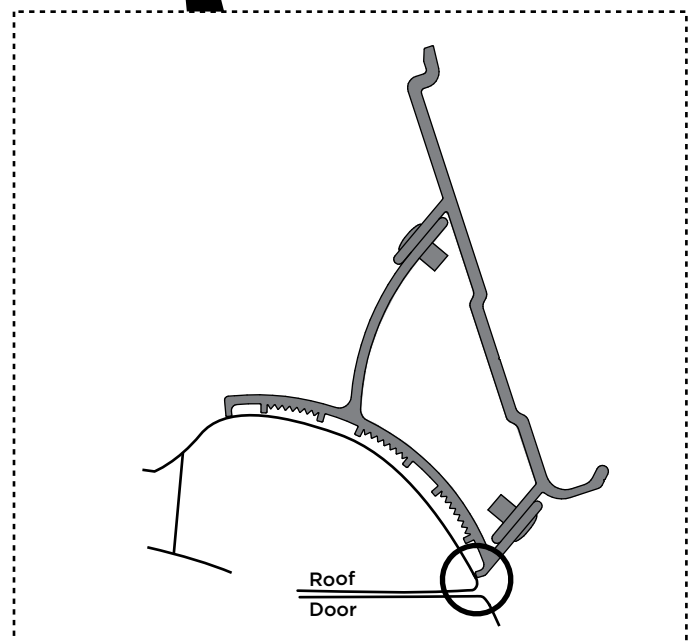


Roof
Door


3

 RHD IS MIRROR OF LHD


A

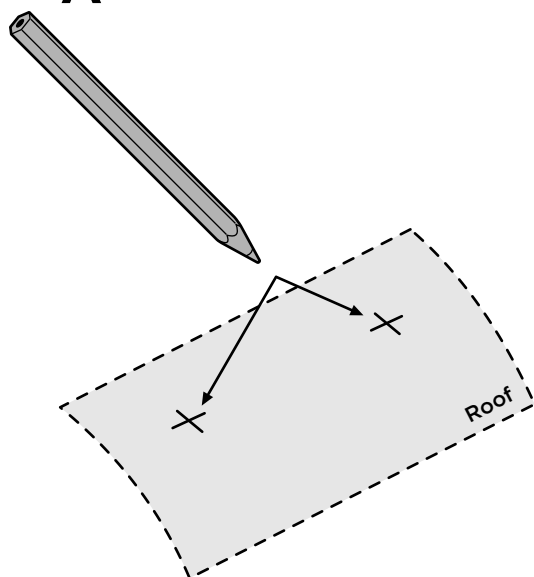


B

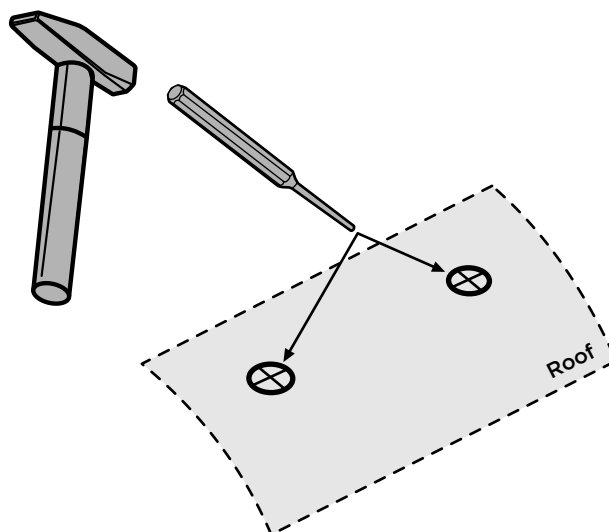


C

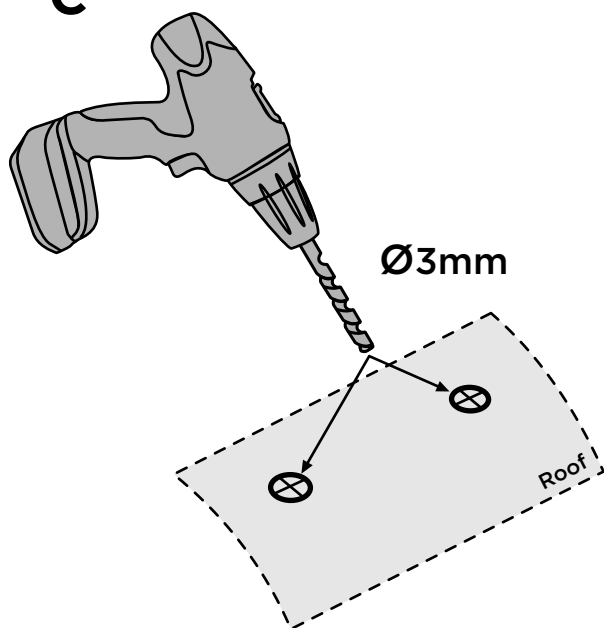


D

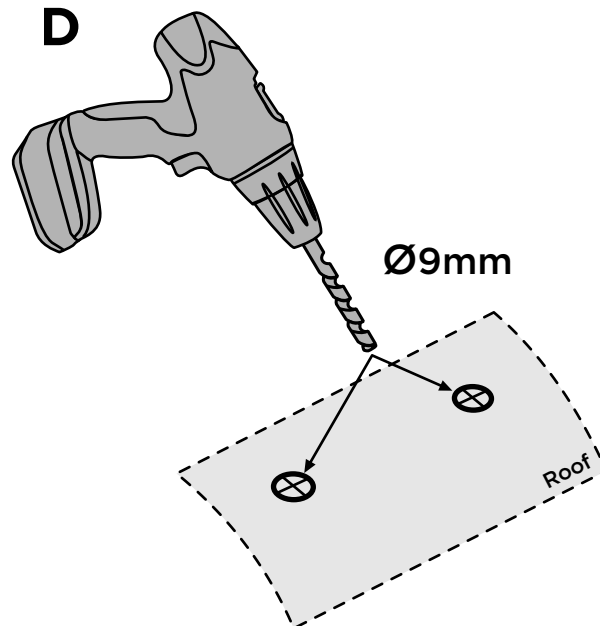

E

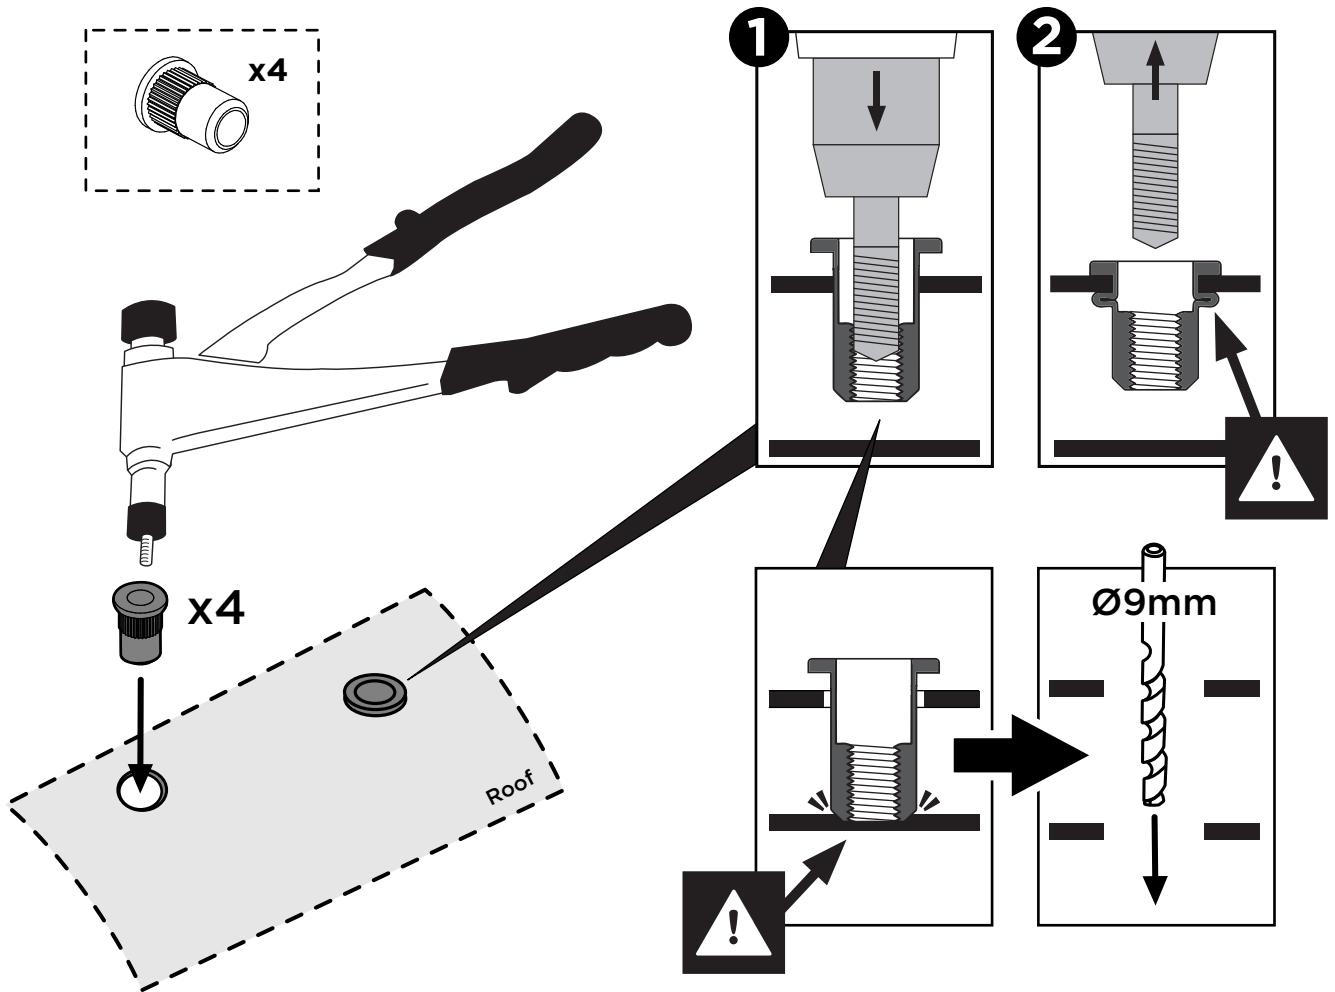

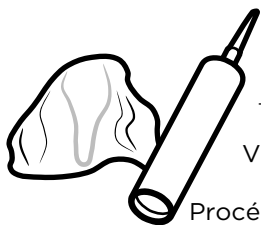

Glue / Lijmen / Verklebung / Colleur:


Thule recommends / beveelt aan / empfiehlt / recommande:

SIKA 252 or Terostat MS937

Preparation and sealing according to the prescripts of the glue supplier.
Voorbehandeling en afdichting volgens de voorschriften van de lijmfabrikant.


Primern und Abdichtung nach Anweisung des Dichtmittelherstellers.

Procédure d'installation suivant les prescriptions indiquées sur l'emballage du produit.

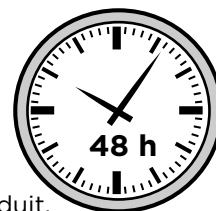


4


A

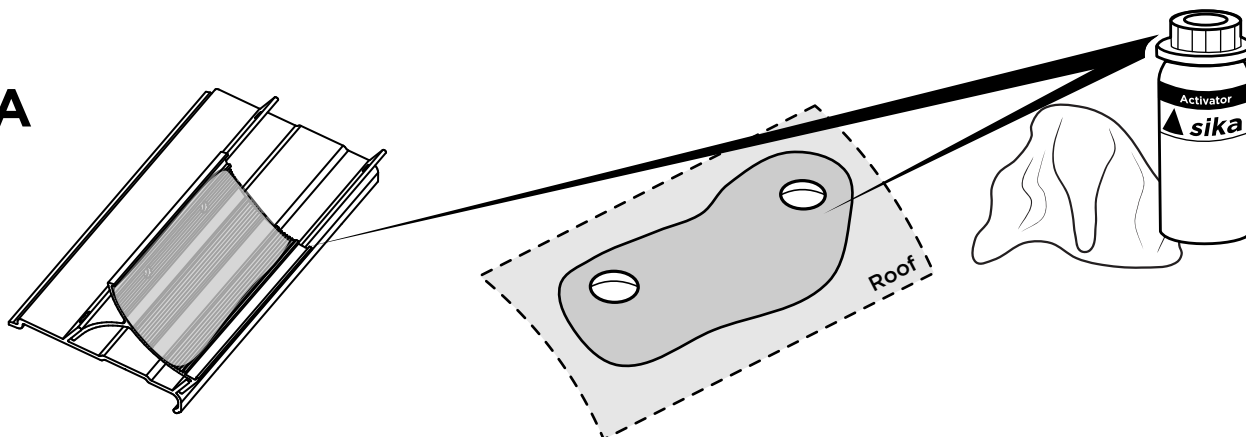

B

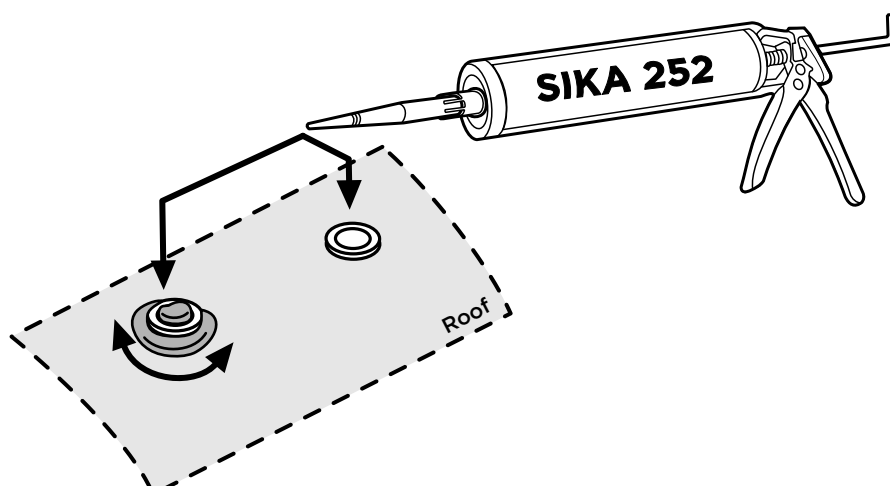



C

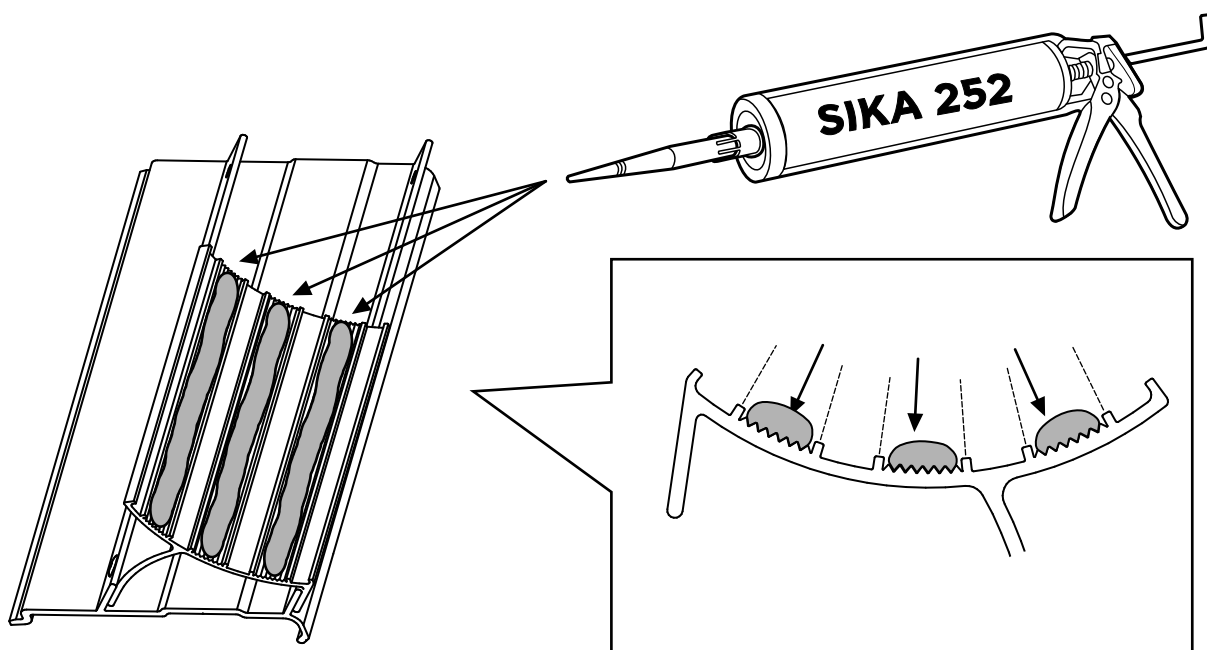




5






! RHD IS MIRROR OF LHD

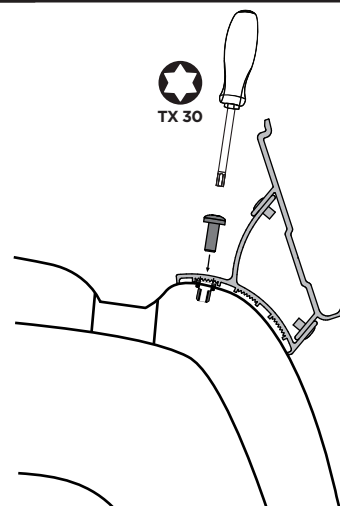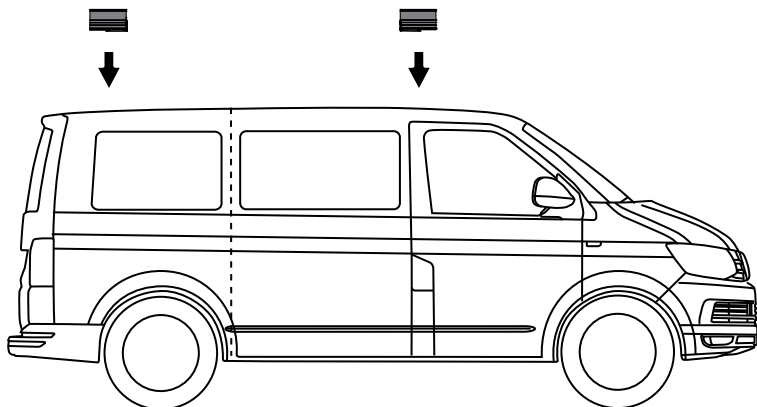

6

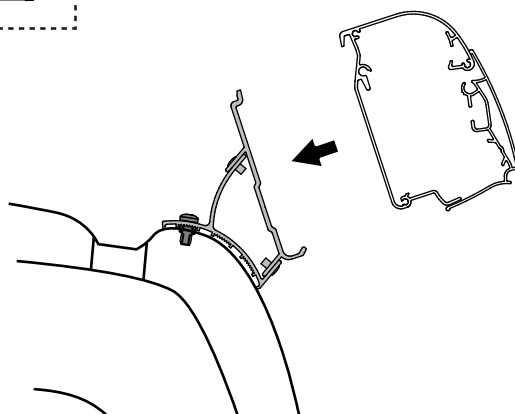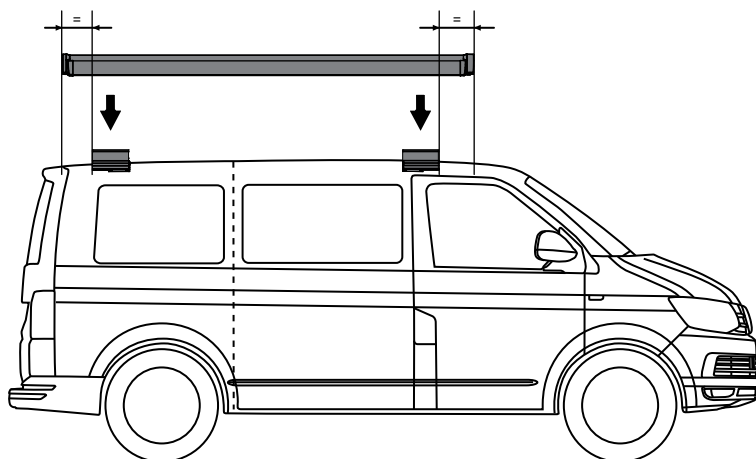
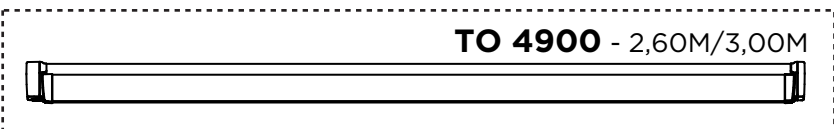


7

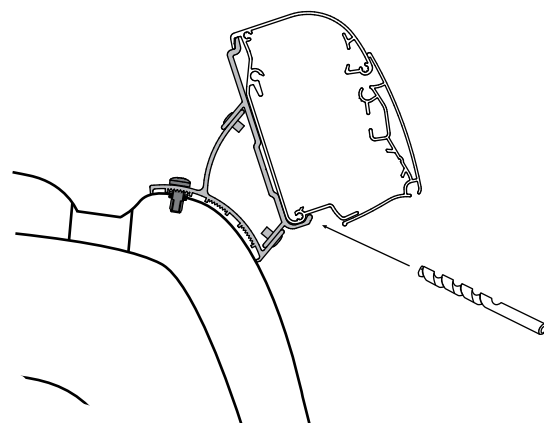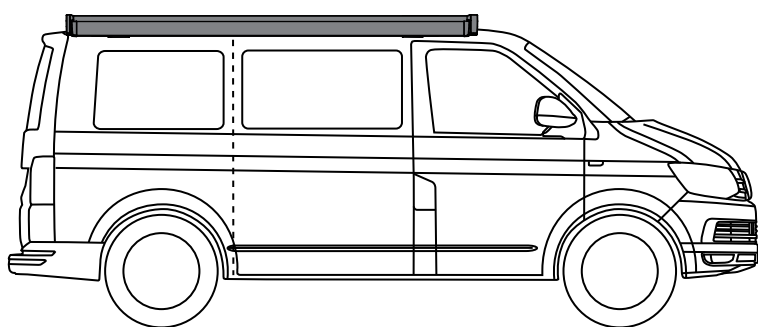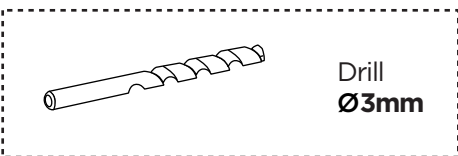


8

4.2 x 16
DIN 7981 TX20 A2
x 4

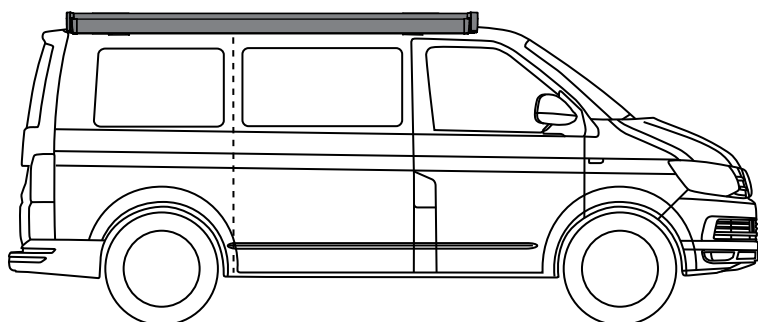

RHD IS MIRROR OF LHD

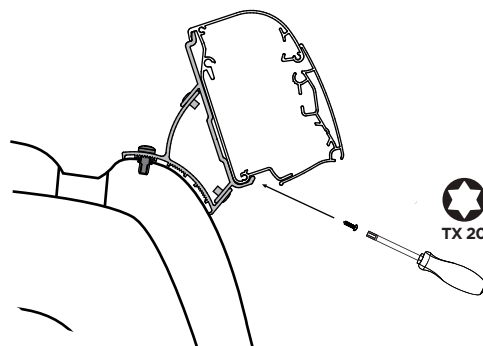

Blank lined paper for writing.

Blank lined paper for writing.

